

# AXIS A4011-E Reader

## Installation Guide



## Liability

Every care has been taken in the preparation of this document. Please inform your local Axis office of any inaccuracies or omissions. Axis Communications AB cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. Axis Communications AB makes no warranty of any kind with regard to the material contained within this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Axis Communications AB shall not be liable nor responsible for incidental or consequential damages in connection with the furnishing, performance or use of this material. This product is only to be used for its intended purpose.

## Intellectual Property Rights

Axis AB has intellectual property rights relating to technology embodied in the product described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the patents listed at [www.axis.com/patent.htm](http://www.axis.com/patent.htm) and one or more additional patents or pending patent applications in the US and other countries.

## Equipment Modifications


This equipment must be installed and used in strict accordance with the instructions given in the user documentation. This equipment contains no user-serviceable components. Unauthorized equipment changes or modifications will invalidate all applicable regulatory certifications and approvals.

## Trademark Acknowledgments

AXIS COMMUNICATIONS, AXIS, ETRAX, ARTPEC and VAPIX are registered trademarks or trademark applications of Axis AB in various jurisdictions. All other company names and products are trademarks or registered trademarks of their respective companies.

## Regulatory Information

### Europe

 This product complies with the applicable CE marking directives and harmonized standards:

- Electromagnetic Compatibility (EMC) Directive 2004/108/EC. See *Electromagnetic Compatibility (EMC) on page 2*.
- Radio and Telecommunications Terminal Equipment (R & TTE) Directive 1999/5/EC. See *Radio Transmission on page 2*.
- Low Voltage (LVD) Directive 2006/95/EC. See *Safety on page 3*.
- Restrictions of Hazardous Substances (RoHS) Directive 2011/65/EU. See *Disposal and Recycling on page 3*.

A copy of the original declaration of conformity may be obtained from Axis Communications AB. See *Contact Information on page 3*.

### Electromagnetic Compatibility (EMC)

This equipment has been designed and tested to fulfill applicable standards for:

- Radio frequency emission when installed according to the instructions and used in its intended environment.
- Immunity to electrical and electromagnetic phenomena when installed according to the instructions and used in its intended environment.

This product fulfills the requirements for immunity according to EN 61000-6-2 industrial environments.

This product fulfills the requirements for emission according to EN 61000-6-3 residential, commercial and light-industrial environments.

### Radio Transmission

This equipment may generate or use radio frequency energy. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation.

This product complies with FCC radiation exposure limits for an uncontrolled environment. Avoid operating this product at a distance less than 20 cm (7.9 in) from the user.

### Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This product complies with IC radiation exposure limits for an uncontrolled environment. Avoid operating this product at a distance less than 20 cm (7.9 in) from the user.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Ce produit est conforme aux limites d'exposition aux radiations IC pour un environnement non contrôlé.

Évitez d'utiliser ce produit à une distance inférieure à 20 cm (7,9 po) de l'utilisateur.

### Europe

Hereby, Axis Communications AB declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

### FR

Par la présente Axis Communications AB déclare que l'appareil ce produit est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

### DE

Hiermit erklärt Axis Communications AB, dass sich dieses Produkt in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet.

### IT

Con la presente Axis Communications AB dichiara che questo prodotto è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

### ES

Por medio de la presente Axis Communications AB declara que el este producto cumple con los requisitos exigibles y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

### FI

Axis Communications AB vakuuttaa täten että tämä tuote tyypinen laite on direktiivin 1999/5/EY oleellisten

vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

## NL

Hierbij verklaart Axis Communications AB dat het toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

## SV

Härmed intygar Axis Communications AB att denna produkt står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

## DA

Undertegnede Axis Communications AB erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

## PT

Axis Communications AB declara que este produto está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

## EL

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Axis Communications AB ΔΗΛΩΝΕΙ ΟΤΙ αυτό το προϊόν ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

## Safety

This product complies with IEC/EN 60950-1 and IEC/EN 60950-22, Safety of Information Technology Equipment. The product shall be grounded either through a shielded network cable (STP) or other appropriate method.

The power supply used with this product shall fulfill the requirements for Safety Extra Low Voltage (SELV) and Limited Power Source (LPS) according to IEC/EN/UL 60950-1.

## Disposal and Recycling

When this product has reached the end of its useful life, dispose of it according to local laws and regulations. For information about your nearest designated collection point, contact your local authority responsible for waste disposal. In accordance with local legislation, penalties may be applicable for incorrect disposal of this waste.

## Europe



This symbol means that the product shall not be disposed of together with household or commercial waste. Directive 2012/19/EU on waste electrical and electronic equipment (WEEE) is applicable in the European Union member states. To prevent potential harm to human health and the environment, the product must be disposed of in an approved and environmentally safe recycling process. For information about your nearest designated collection point, contact your local authority responsible for waste disposal. Businesses should contact the product supplier for information about how to dispose of this product correctly.

This product complies with the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).

## China



This product complies with the requirements of the legislative act Administration on the Control of Pollution Caused by Electronic Information Products (ACPEIP).

## Contact Information

Axis Communications AB  
Emdalavägen 14  
223 69 Lund  
Sweden

Tel: +46 46 272 18 00

Fax: +46 46 13 61 30

[www.axis.com](http://www.axis.com)

## Support

Should you require any technical assistance, please contact your Axis reseller. If your questions cannot be answered immediately, your reseller will forward your queries through the appropriate channels to ensure a rapid response. If you are connected to the Internet, you can:

- find answers to resolved problems in the FAQ database. Search by product, category, or phrase
- report problems to Axis support staff by logging in to your private support area
- chat with Axis support staff
- visit Axis Support at [www.axis.com/techsup/](http://www.axis.com/techsup/)

## Learn More!

Visit Axis learning center [www.axis.com/academy/](http://www.axis.com/academy/) for useful trainings, webinars, tutorials and guides.

## Safety Information

Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference.

## Hazard Levels

### ⚠ DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

### ⚠ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### ⚠ CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### NOTICE

Indicates a situation which, if not avoided, could result in damage to property.

## Other Message Levels

### Important

Indicates significant information which is essential for the product to function correctly.

### Note

Indicates useful information which helps in getting the most out of the product.

## Safety Instructions

### ⚠ WARNING

- The Axis product shall be installed by a trained professional.

**NOTICE**

- The Axis product shall be used in compliance with local laws and regulations.
- Store the Axis product in a dry and ventilated environment.
- Avoid exposing the Axis product to shocks or heavy pressure.
- Do not install the product on unstable brackets, surfaces or walls.
- Use only applicable tools when installing the Axis product. Using excessive force with power tools could cause damage to the product.
- Do not use chemicals, caustic agents, or aerosol cleaners.
- Use a clean cloth dampened with pure water for cleaning.
- Use only accessories that comply with technical specification of the product. These can be provided by Axis or a third party.
- Use only spare parts provided by or recommended by Axis.
- Do not attempt to repair the product by yourself. Contact Axis support or your Axis reseller for service matters.

**Transportation****NOTICE**

- When transporting the Axis product, use the original packaging or equivalent to prevent damage to the product.

## Installation Guide

This Installation Guide provides instructions for connecting AXIS A4011-E Reader to a network door controller. AXIS A4011-E Reader is an OSDP reader that is designed to communicate with Axis network door controllers.

### Installation Steps

1. Make sure the package contents, tools and other materials necessary for the installation are in order. See *page 5*.
2. Study the hardware overview. See *page 6*.
3. Study the specifications. See *page 7*.
4. Install the hardware. See *page 10*.

### Package Contents


- AXIS A4011-E Reader
- Installation Guide (this document)

### Recommended Tools

- Drill for drilling the mounting holes.
- Torx screwdriver T20 for the frontplate screw.
- Diagonal pliers for stripping the wires.


# AXIS A4011-E Reader

## Hardware Overview

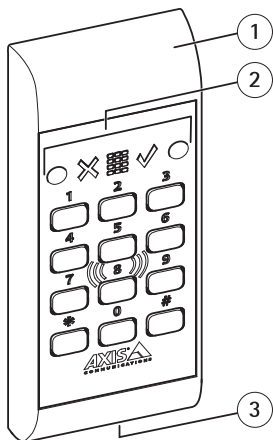

### Front (left)

- 1 Frontplate
- 2 Reader feedback LED indicators
- 3 Frontplate screw (T20)

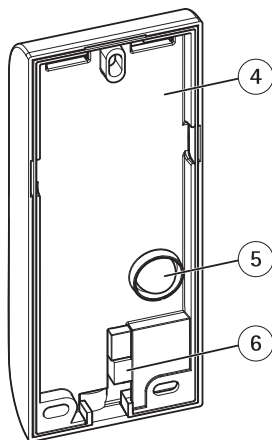

### Back (right)

- 4 Backplate
- 5 Tampering alarm switch
- 6 Power & Data connector

## Reader Feedback

The table below shows the feedback signals that are preconfigured in the reader when connected to an Axis network door controller.

Event/state	LED indicator	Beeper pattern
Door locked	✘ Steady red	Silent
Door unlocked	✔ Steady green	Silent
PIN required	✘ █ Steady red/Steady amber	Two short beeps
Entering PIN	✘ █ Steady red/Steady amber	Silent
Access granted	✔ Steady green	One short beep

The table below shows the feedback signals that are preconfigured in the reader when connected to an Axis network door controller. (Continued)

Access denied	✘ Steady red	One long beep
Pre-alarm warning	✘ Steady red	Short beeps until entering new state
Door open too long	✘ Flashing red	Constant beep

## Specifications

Identification types	See page 8.
Power consumption	12–24 V DC, max 2.1 W
Connectors	Power & Data connector. See page 8. Tampering alarm switch. See page 9. DIP switches. See <i>DIP Switches</i> .
Wire area	See page 9.
Operating conditions	Intended for outdoor use Operating temperature: -25 °C to 70 °C Humidity: 95% RH non-condensing
Approvals	EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6 EN 61000-6-2, EN 61000-6-3 ETSI EN 300 330-2, ETSI EN 301 489-1, ETSI EN 301 489-3 CISPR 16-2-1, CISPR 16-2-3 FCC Part 15 Subpart C RSS-Gen, RSS-210 AS/NZS 4268 IEC/EN 60950-1, IEC/EN 60950-22 EN 50581 (RoHS) IEC/EN 60529 IP54
Dimensions (HxWxD)	157 x 56 x 22 mm (6.18 x 2.17 x 0.87 in)
Weight	270 g (0.6 lb)
Warranty	Axis 3-year warranty and AXIS Extended Warranty option, see <a href="http://www.axis.com/warranty">www.axis.com/warranty</a>

# AXIS A4011-E Reader

## Identification Types

Identification types are portable credential storage devices, pieces of memorized information, or various combinations of the two that determine how users will be granted access to the door. Common identification types include tokens such as cards or key fobs, personal identification numbers (PINs), and request to exit (REX) devices.

The reader supports the following formats:

- MIFARE® DESFire®
- MIFARE® Classic
- iClass®

To program the reader for MIFARE®Classic sector reading, a customer-specific setup card is needed. For more information, contact Axis Support at [www.axis.com/techsup](http://www.axis.com/techsup).

## Power & Data Connector

4-pin terminal block for DC power input and data. Supports RS485 and OSDP protocols for communication with the door controller.



### NOTICE

Use a Safety Extra Low Voltage (SELV) compliant limited power source (LPS) with either a rated output power limited to  $\leq 100$  W or a rated output current limited to  $\leq 5$  A. For example, AXIS A1001 Network Door Controller fulfills these requirements when powered by Power over Ethernet (PoE) or a SELV-compliant LPS.

Function	Pin	Notes	Specifications
DC input	1	Power input from controller or external power supply. Note: This pin can only be used as power in.	Min 12 V DC (-10%) Max 24 V DC (+15%)
0 V DC (-)	2		
RS485	3	For half duplex RS485 (RX/TX)	A
	4		B

### Important

- The recommended maximum cable length is 30 m (98.4 ft).
- To use the reader with AXIS A1001, connect the RS485 wires from A to B and from B to A. For more information about Axis network door controller connections, see the hardware pin chart, generated through the door controller's hardware configuration, and the User Manual, available at [www.axis.com](http://www.axis.com).



## Wire Area

### NOTICE

Each wire shall have an area that corresponds to an conductor gauge range of AWG 28–16 (CSA) or AWG 22–14 (cUL/UL). Select cables in compliance with your local regulations.

AWG	Diameter mm (in)	Area mm <sup>2</sup>
28–16	0.321–1.29 (0.0126–0.0508)	0.0810–1.31
22–14	0.644–1.63 (0.0253–0.0641)	0.326–2.08

## Tampering Alarm

The tampering alarm switch and tampering alarm sensor can toggle between an open and closed circuit. When the reader is removed from the surface it is attached to, or when the frontplate is removed, an alarm event is sent to the door controller. In the door controller, the alarm event can be used to trigger an action. For information, see the door controller's User Manual.

## DIP Switches


The reader can be configured through eight DIP switches that are located on the right side of the circuit board. To change the configuration, remove the frontplate, and then flip the DIP switches as required. For information about card formats and reader feedback, see the door controller's User Manual.

DIP	Default setting	Function
1	OFF	Address value 1
2	OFF	Address value 2
3	OFF	Address value 4
4	OFF	Key beep: beep at keystrokes and major/minor signal at invalid/valid card
5	OFF	Card beep: beep at card read
6	OFF	n/a
7	OFF	Light on: keypad always lit
8	OFF	Light code: keypad lits when the indication for PIN code is activated

# AXIS A4011-E Reader

## Install the Hardware

1. Remove the frontplate screw and remove the frontplate from the reader backplate.
2. Prepare the wall for installation of the reader. Hold the backplate against the surface and mark the holes with a pencil. Make sure to use drill bits, screws and plugs that are appropriate for the material.

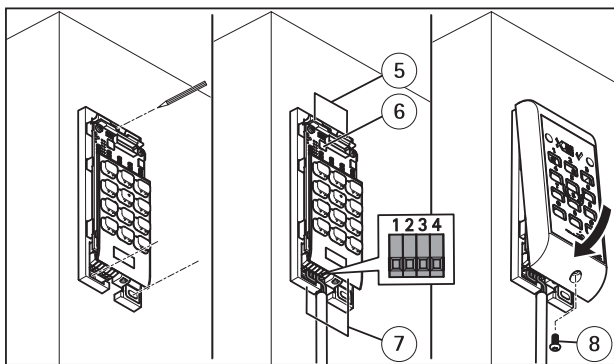

### Power & Data connector (pin 1–4)

- 1 DC input
- 2 0 V DC (-)
- 3 RS485 (A)
- 4 RS485 (B)

### Other hardware

- 5 Tab (2x)
- 6 Tampering sensor
- 7 Silicone gasket (2x)
- 8 Frontplate screw (T20)

3. Strip and connect the wires. For specifications, see *Power & Data Connector on page 8*.
4. Make sure that the silicone gaskets are positioned correctly.
5. Hook the frontplate onto the tabs on the backplate and push the front panel into place.
6. Tighten the screw.

## Further Information

Visit Axis learning center [www.axis.com/academy](http://www.axis.com/academy) for useful trainings, webinars, tutorials and guides.

## Warranty Information

For information about Axis' product warranty and thereto related information, see [www.axis.com/warranty/](http://www.axis.com/warranty/)

