



## Installation Guide

Included Installation Instructions

### Network Camera For professional use only

Model No. **WV-U1142A** Indoor use

**WV-U1132A** Indoor use

**WV-U1130A** Indoor use



WV-U1142A

### About the user manuals

Product documentation is composed of the following documents.

- Installation Guide (this document):** Provides information about "Precautions", "Precautions for installation" and the installation method.
- Basic Information (in the following manual website):** Provides information about "Precautions for use" and "Detail specifications".
- Operating Instructions (in the following manual website):** Explains how to perform the settings and how to operate this camera.



\*-Control No.: C\*\*\*\*- used in these documents should be used to search for information on our support website (https://i-pro.com/global/en/surveillance/training\_support/support/technical\_information) and will guide you to the right information.



- Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.
- microSDXC/ microSDHC/ microSD memory card is described as microSD memory card.
- The external appearance and other parts shown in this manual may differ from the actual product within the scope that will not interfere with normal use due to improvement of the product.

### For U.S. and Canada:

i-PRO Americas Inc.  
https://www.i-pro.com/

### For Europe and other countries:

i-PRO Co., Ltd. Fukuoka, Japan  
https://www.i-pro.com/

i-PRO EMEA B.V. UK Branch  
1010 Cambourne Business Park,  
Cambridge CB3 6DP

Authorized Representative in EU:  
i-PRO EMEA B.V.  
Laarderhoogweg 25, 1101 EB  
Amsterdam, Netherlands

\*PGQX2464YA\*



No8021-1042  
Printed in China

### Disposal of Old Equipment and Batteries

#### Only for European Union and countries with recycling systems

These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local authority. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### Note for the battery symbol (bottom symbol)

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

### For U.S.A.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### For U.S.A.

The model number and serial number of this product may be found on the surface of the unit. You should note the model number and serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid identification in the event of theft.

### For Canada

CAN ICES-3(A)/NMB-3(A)

FCC CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Supplier's Declaration of conformity

Trade name : i-PRO  
Model No. : WV-U1142A, WV-U1132A,  
WV-U1130A

Responsible Party :  
i-PRO Americas Inc,  
8550 Fallbrook Drive, Suite 200 Houston,  
Texas 77064  
Support Contact : 1-800-513-5417



### For U.S.A.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Méthode d'installation	Vis de fixation recommandée	La capacité de traction minimale requise
<b>Pour une installation au plafond</b> Platine de fixation d'installation: 260 g (0,57 lbs) Caméra vidéo: Maxi.200 g (0,44 lbs)	M6 x 16 mm (5/8 pouces) / 4 éL.	562 N (126 lbf)
<b>Pour une installation murale</b> Platine de fixation d'installation: 420 g (0,93 lbs) Caméra vidéo: Maxi.200 g (0,44 lbs)	M6 x 16 mm (5/8 pouces) / 4 éL.	724 N (163 lbf)
<b>Pour fixer le câble de sécurité</b>	M4 x 16 mm (5/8 pouces) / 1 éL.	24,5 N (5,5 lbf)

\* La longueur de la vis est un exemple lors de l'installation de la caméra : au plafond ou sur un mur robuste d'une épaisseur de 20 mm (25/32 pouces) ou plus.

### Caution:

- The network camera is only intended for a connection to an ethernet or PoE network without routing to the outside plant.
- This product has no power switch. Be sure to install disconnect devices such as a circuit breaker to shut down the main power of power-supplying equipment to this product.
- Before attempting to connect or operate this product, please read these instructions carefully.

### Note:

- This product is not suitable for use in locations where children are likely to be present.
- Do not install this product in locations where ordinary persons can easily reach.
- This product is a professional equipment.
- For information about screws and other parts required for installation, refer to the corresponding section of this document.

■ ■ ■ Direct current symbol

## Precautions

### ■ Do not insert any foreign objects.

Fire or electrical shock may be caused if water or any foreign objects, such as metal objects, enter inside the unit. Turn the power off immediately and contact qualified service personnel for removal.

### ■ Do not use this product in an inflammable atmosphere.

Failure to observe this may cause an explosion resulting in injury.

### ■ Avoid installing this product in the locations where salt damage occurs or corrosive gas is produced.

Otherwise, the mounting portions will deteriorate and injury or accidents due to a fall of the product may occur.

### ■ Do not strike or give a strong shock to this product.

Failure to observe this may cause injury or fire.

### ■ Keep microSD memory cards away from infants and children.

Otherwise, they may swallow the cards by mistake.

### ■ Do not hang down from this product or use this product as a pedestal.

Failure to observe this may cause injury or accidents.

### ■ Do not attempt to disassemble or modify this product.

Failure to observe this may cause fire or electric shock. Consult the dealer for the repair or inspections.

### ■ Do not install or clean the camera, or touch this product, the power cable or the connected cables during thunder storms.

Failure to observe this may cause electric shock.

### ■ Refer installation work to the dealer.

Installation work requires technique and experience. Failure to observe this may cause fire, electric shock, injury, or damage to the product. Be sure to consult the dealer.

### ■ Stop the operation immediately when something is wrong with this product.

When smoke goes up from the product, the smell of smoke comes from the product, or the exterior of the product has deteriorated, continued use will cause a fire or fall of the product resulting in injury, or damage to the product.

### ■ Select an installation area that can support the total weight.

Selecting an inappropriate installation surface may cause this product to fall down or topple over, resulting in injury or accidents. Installation work shall be started after sufficient reinforcement.

### ■ Periodic inspections shall be conducted.

Rust on the metal parts or screws may cause a fall of the product resulting in injury or accidents.

### ■ Turn the power off when do wiring of this product.

Failure to observe this may cause electric shock. In addition, short circuit or wrong wiring may cause fire.

### ■ Install this product in a location high enough to avoid people and objects from bumping the product.

Failure to observe this may cause injury.

### ■ The measures of protection against a fall of this product shall be taken.

Failure to observe this may cause a drop resulting in injury.

### ■ Do not install this product in locations subject to vibration.

Be sure to install the safety wire.

### ■ Do not install this product in locations subject to vibration.

Loosening of mounting screws or bolts may cause a fall of the product resulting in injury or accidents.

### ■ Correctly perform all wiring.

Short circuits in the wiring or incorrect wiring may cause fire or electrical shock.

### ■ Install the product securely on a wall or a ceiling in accordance with the installation instructions.

Failure to observe this may cause injury or accidents.

### ■ Do not rub the edges of metal parts with your hand.

Failure to observe this may cause injury.

### ■ Turn the power off when cleaning this product.

Failure to observe this may cause injury.

## About notations

The following notations are used when describing the functions limited for specified models. The functions without the notations are supported by all models.

- U1142** The functions with this notation are available when using the model WV-U1142A (4M pixel model).
- U1132** The functions with this notation are available when using the model WV-U1132A (Full HD model).
- U1130** The functions with this notation are available when using the model WV-U1130A (Full HD model).

## Open Source Software

- This product contains open source software licensed under GPL (GNU General Public License), LGPL (GNU Lesser General Public License), etc.
- Customers can duplicate, distribute and modify the source code of the software under license of GPL and/or LGPL.
- For details concerning licensing and source code of open source software, click "Click here for OSS information" on "Support" page of the setup menu of this product and read the displayed content.
- Please note that we shall not respond to any inquiries regarding the contents of the source code.

## Copyright

Except for open source software licensed under GPL/LGPL and so on, distributing, copying, disassembling, reverse compiling and reverse engineering of the software provided with this product are all expressly prohibited. In addition, exporting any software provided with this product violating export laws is prohibited.

## Trademarks and registered trademarks

- Microsoft, Windows, Windows Media, Internet Explorer, Microsoft Edge, and ActiveX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Intel and Intel Core are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries.
- Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe in the United States and/or other countries.
- microSDXC Logo is a trademark of SD-3C, LLC.
- iPad and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.
- Android and Google Chrome are trademark of Google LLC.
- Firefox is a trademark of the Mozilla Foundation in the US and other countries.
- The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.
- All other trademarks identified herein are the property of their respective owners.

## Precautions for installation

i-PRO Co., Ltd. assumes no responsibility for injuries or property damage resulting from failures arising out of improper installation or operation inconsistent with this documentation.

### ■ In order to prevent injury, the product must be securely mounted to a wall or ceiling according to Installation Guide.

#### ■ Installation area for this product

- Select an appropriate place for the installation area (such as a strong wall or ceiling) in your particular environment.
- Make sure that the installation area is strong enough to hold this product, such as a concrete ceiling.
- Install the camera in the foundation area of the architecture or where sufficient strength is assured.
- Do not mount the product on a plaster board or a wooden section because they are too weak. If the product is unavoidably mounted on such a section, the section shall be sufficiently reinforced.

#### ■ This camera is designed to be used indoors

This product is not operable outdoors. Do not expose this camera to direct sunlight for hours and do not install the product near a heater or an air conditioner. Otherwise, it may cause deformation, discoloration and malfunction. Keep this camera away from water and moisture.

#### ■ Do not place this product in the following places

- Locations where a chemical agent is used such as a swimming pool
- Locations subject to moisture or oil smoke such as a kitchen
- Locations that have a specific environment that is subject to an inflammable atmosphere or solvents
- Locations where a radiation, an X-ray, a strong radio wave or a strong magnetic field is generated

- Locations near coasts directly subjected to sea breezes, or locations subject to corrosive gases such as from hot springs, volcanic regions, etc.
- Locations where the temperature is not within the specified range
- Locations subject to vibrations, such as on vehicles, marine vessels, or above product lines (This product is not designed for on-vehicle use.)
- Locations where it may get wet directly from rain or water splash (including under the eaves, etc.)
- Locations subject to moisture or dust
- Locations subject to sudden changes in temperature such as near air discharge vents of air conditioners or air circulation inlet doors
- Locations near rubber products (packing, rubber feet, etc.)

#### ■ Screw tightening

Do not use an impact driver. Use of an impact driver may damage the screws or cause tightening excessively.

#### ■ About reflection of light from outside or IR light

Light may appear on the screen depending on the incident angle of external light.

In the case of using the IR light, installation of a camera near a wall may cause reflection of infrared rays resulting in a part of the screen or the entire screen turning whitish.

#### ■ Refer to our support website <Control No. C0109> for image examples and measures to take.

#### ■ Protection from lightning

When the cables brought from outdoors are used, there is a chance that they may be affected by lightning. In such a case, install a lightning arrester close to the camera, and make the length of the network cable between the camera and lightning arrester as short as possible to prevent the camera from being affected by lightning.

#### ■ When noise disturbance may happen

Noise may appear in video or audio near a strong electric field from a TV or radio antenna, motors and transformers, or a strong electric field/magnetic field from a power line (lamp line) of AC100 V or more. Conduct the power distribution work to keep 1 m (3,28 feet) away from them or conduct the electric conduit work using metal pipes. (Be sure to make ground connection of the metal pipes.)

#### ■ Make sure to remove this product if it will no longer be used.

#### ■ This product has no power switch.

When turning off the power, disconnect the power supply from the PoE device.

#### ■ About the battery

A battery is installed inside the camera. Do not leave the battery exposed in environments of excessive heat as a result of sunlight or fire.

#### ■ Equipment classification and power source indication label

Refer to the indication label on the bottom side of this unit for the equipment classification, power source, and other information.

## Troubleshooting

Before requesting service, refer to "Troubleshooting" of Basic Information and Operating Instructions on our support website. Then, confirm the trouble.

## Specifications

*For further information, refer to the Basic Information.	
Power source *1:	PoE (IEEE802.3af compliant)
Power consumption *1:	PoE DC 48 V : 100 mA/ Approx. 4.8 W (Class 2 device) <b>U1142</b> PoE DC 48 V : 90 mA/ Approx. 4.3 W (Class 2 device) <b>U1132</b> PoE DC 48 V : 80 mA/ Approx. 3.8 W (Class 2 device) <b>U1130</b>
Operating environment	
Ambient operating temperature:	-10 °C to +50 °C (14 °F to 122 °F) (Power On range: 0 °C to 50 °C (32 °F to 122 °F))
Ambient operating humidity:	10 % to 90 % (no condensation)
Storage environment	
Storage temperature:	-30 °C to +60 °C (-22 °F to +140 °F)
Storage humidity:	10 % to 95 % (no condensation)
Dimensions:	69 mm (W) x 49 mm (H) x 116 mm (D) (2-5/16 inches (W) x 1-15/16 inches (H) x 4-9/16 inches (D)) (excluding projection of the slide cover)
Mass:	Approx. 200 g (0,44 lbs) <b>U1142</b> Approx. 155 g (0,34 lbs) <b>U1132</b> Approx. 150 g (0,33 lbs) <b>U1130</b>
Finish:	Main body : ABS/PC resin, i-PRO white

\*1 Refer to our support website <Control No.: C0106> for further information about Power source and Power consumption information.

## Standard accessories

Installation Guide (this document) ..... 1 pc. Code label\*1..... 1 pc.  
IMPORTANT SAFETY INSTRUCTIONS..... 1 pc.

\*1 This label may be required for network management. Use caution not to lose this label.

The following parts are used during installation procedures.

Safety wire..... 1 pc. Spring washer..... 1 pc.

Washer..... 1 pc.

## Other items that are needed (not included)

- Fixing screw

Installation method	Recommended screw *1	Minimum pull-out strength*2
<b>Ceiling</b>		
<b>For mounting on ceiling</b> Mount bracket: 260 g (0,57 lbs) Camera: max.200 g (0,44 lbs)	M6 x 16 mm *1+ (5/8 inches) x 4 pcs.	562 N (126 lbf) *5
	M4 x 16 mm *5 (5/8 inches) x 1 pc.	24,5 N (5,5 lbf)
<b>Wall</b>		
<b>For mounting on wall</b> Mount bracket: 420 g (0,93 lbs) Camera: max.200 g (0,44 lbs)	M6 x 16 mm *1+ (5/8 inches) x 4 pcs.	724 N (163 lbf) *5
	M4 x 16 mm *5 (5/8 inches) x 1 pc.	24,5 N (5,5 lbf)

\*1 Select screws according to the material of the location that the camera will be mounted to. In this case, wood screws and nails should not be used.

\*2 This value indicates the minimum pull-out strength required value per screw. For information about the minimum pull-out strength, refer to our support website <Control No.: C0120>.

\*3 The screw length is an example when installing the camera on a robust ceiling or wall with a thickness of 20 mm (25/32 inches) or more.

\*4 The number of required screws or anchor bolts varies depending on the specifications of the mount bracket (locally procured). Refer to the operating instructions of the mount bracket (locally procured) for information about how to mount the mount bracket.

 
\*5 Make sure that the screws or anchor bolts separately procured when locally procuring a mount bracket for the ceiling or wall are capable of supporting the total weight (including the moment force when mounting to a wall).

\*6 RJ45plug, Ethernet cable (category 5e or better, straight, 4 pairs (8 pins))

\*7 Tools


### Parts and functions

**<Top>**



1/4-20UNC fixing screw hole (depth 5.5 mm (7/32 inches))

**<Side>**

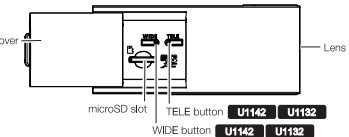

Slide cover


Lens

microSD slot

TELE button U1142 U1182


WIDE button U1142 U1182

**<Bottom>**

 

1/4-20UNC fixing screw hole (depth 5.5 mm (7/32 inches))

**<Rear>**

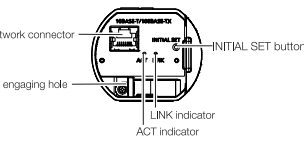

RJ45 Network connector

INITIAL SET button

Wire engaging hole

LINK indicator

ACT indicator

**■Indicators**

**Note:**

- Lighting/blinking LED can be turned off with the software settings at any time, (The initial state is lighting or blinking.) Refer to the Operating Instructions, and set the LED to be solid off if necessary.

<b>LINK indicator</b>	When the camera is able to communicate with the connected device	Lights orange
<b>ACT indicator</b>	When data is being sent via the network camera	Blinks green (accessing)

**■Buttons**

**INITIAL SET button (Initializing)**

Follow the steps below to initialize the network camera. Retry if the camera does not start up normally.

Turn off the power of the camera	→	Turn on the power of the camera while pressing the INITIAL SET button	15 seconds	→	(Make sure to release the button)	around 2 minutes	→	The camera will start up and the settings including the network settings will be initialized
----------------------------------	---	---	------------	---	-----------------------------------	------------------	---	--

Do not turn off the power of the camera during the process of initialization. Otherwise, it may fail to initialize and may cause malfunction.

**TELE button**

Click the TELE button to adjust the zoom ratio to the "Tele" side.

**WIDE button**

Click the WIDE button to adjust the zoom ratio to the "Wide" side.

### Step3 Mount (Fix in accordance with the installation method)

**Ceiling**

- Loosen the camera mount bracket fixing mechanism to freely move the camera mount bracket.
- Align the screw thread with the fixing screw hole of the camera, and rotate the camera mount bracket to secure the camera.

**Wall**

- Loosen the camera mount bracket fixing mechanism to freely move the camera mount bracket.
- Align the screw thread with the fixing screw hole of the camera, and rotate the camera mount bracket to secure the camera.

**IMPORTANT:**


- Be sure to rotate and secure the camera mount bracket. Rotating the camera places a large burden on the camera mount bracket, and may cause damage.

**IMPORTANT:**

- Be sure to rotate and secure the camera mount bracket. Rotating the camera places a large burden on the camera mount bracket, and may cause damage.

**IMPORTANT:**


- Tighten the camera mount bracket fixing mechanism and secure the camera mount bracket.

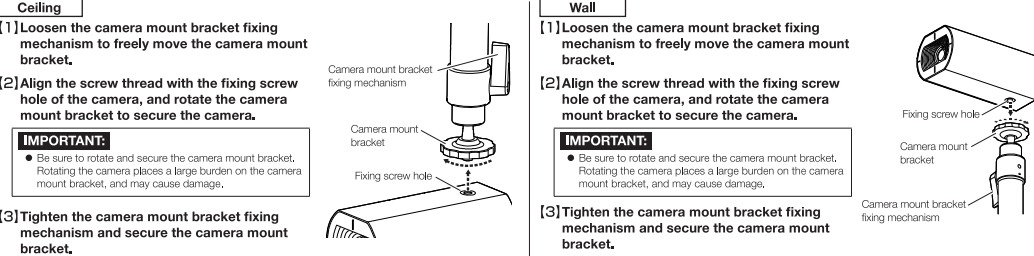

### Step1 Preparations

- Attach the safety wire (accessory)

Engage the safety wire (accessory) with the wire engaging hole.

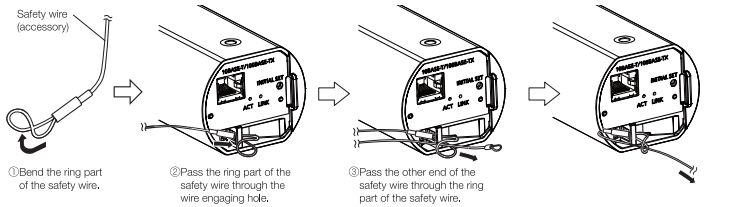


- Bend the ring part of the safety wire.
- Pass the ring part of the safety wire through the wire engaging hole.
- Pass the other end of the safety wire through the ring part of the safety wire.

- If necessary, insert a microSD memory card by referring to "Insert / remove a microSD memory card".

### Step4 Making connections

**IMPORTANT:**

- Devices to which power can be supplied to this product are PoE hub and PoE power supplying equipment.
- Turn off each system's power supply before making a connection.

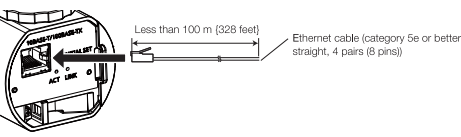


### Step5 Adjustment

- Turn on the camera.
- Download and launch the IP Setting Software and connect to the network by following information described on our support website <Control No.: 0123>.
- Adjust the camera direction.


**IMPORTANT:**

- When adjusting the camera angle, make sure to loosen the camera mount bracket fixing mechanism on the camera mount bracket before making adjustments. If the camera angle is changed when the camera mount bracket fixing mechanism is tightened, excessive force is applied to the camera mount bracket and camera, which may damage them.

**Ceiling**

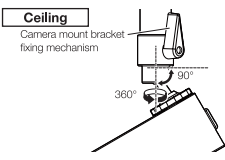

**Wall**

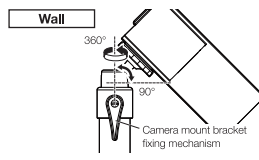

- Adjust the zoom ratio of the camera, U1142 U1182

- Open the slide cover by placing your finger on the projection of the slide cover and sliding it.
- Adjust the zoom ratio using the TELE button and the WIDE button while watching the screen.
- Close the slide cover.

**Note:**


- After approx. 3 seconds from releasing the TELE button or the WIDE button, the auto focus function will automatically be executed. Do not touch the camera during execution of the auto focus function.
- When the resolution is set to higher than 640x360, image quality may deteriorate depending on the zoom ratio. Refer to our support website <Control No.: C0124> for further information.

- Fix the safety wire on the installation surface.

**Ceiling**

Attach the safety wire (accessory) to the foundation area of the architecture or where sufficient strength is assured.


Ceiling mount bracket (example)

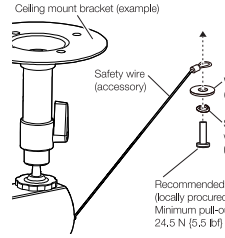

**Wall**

Attach the safety wire (accessory) to the foundation area of the architecture or where sufficient strength is assured.

Wall mount bracket (example)

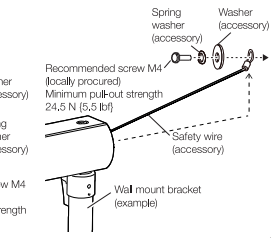

### Step2 Processing the installation surface (Process in accordance with the installation method)


**Common**

- Determine the mounting height of the camera so that the lowest part of the camera or the camera mounting bracket after the installation is 2 m 80 cm [110 inches] or higher from the floor.

**Ceiling**

- Mark the position of holes to be made for the ceiling mount bracket (locally procured) on the attachment position of the ceiling, and make those holes for attachment.
- Secure the ceiling mount bracket (locally procured) using separately procured fixing screws or anchors.


Minimum pull-out strength: Refer to the instruction guide of the ceiling mount bracket.

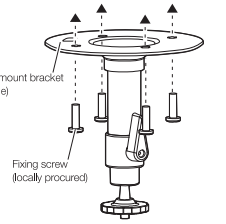

**Wall**

- Mark the position of holes to be made for the wall mount bracket (locally procured) on the attachment position of the wall, and make those holes for attachment.
- Secure the wall mount bracket (locally procured) using separately procured fixing screws or anchors.

Minimum pull-out strength: Refer to the instruction guide of the wall mount bracket.

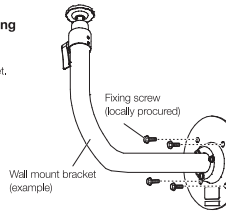

### Insert / remove a microSD memory card


**Insert a microSD memory card**

- Open the slide cover by placing your finger on the projection of the slide cover and sliding it.
- Insert the microSD memory card into the end of the microSD slot and confirm that a clicking sound is made.

**Note:**

- Back end of the microSD memory card does not protrude over the surface of the microSD slot (the same surface as the microSD symbol).

**Close the slide cover.**  
(The right illustration shows an example of WV-U1142A.)

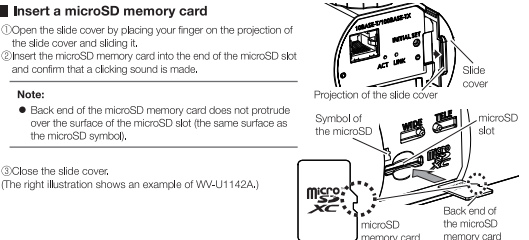

**Remove a microSD memory card**

When removing a microSD memory card, reverse the procedure.

- Open the slide cover by placing your finger on the projection of the slide cover and sliding it.
- Remove the microSD memory card by pushing it down until a click sound is heard while holding the card with a finger to prevent it from popping out.
- Close the slide cover.

**IMPORTANT:**

- When removing a microSD memory card, make sure to set "SD memory card" to "Not use" on the [SD memory card] tab of the setup menu before removing the microSD memory card. After removing the memory card, set back the "SD memory card" to "Use". For information about the setup menu, refer to the Operating Instructions.

**Note:**

- When using a microSD memory card, format it using this product. Refer to the Operating Instructions for how to format a microSD memory card.
- Use the compatible microSD memory cards. Refer to our support website <Control No.: C0107> for latest information about the compatible microSD memory cards.